

## BH6-D500W2-230

Switching and dimming of lamps

8 control-channel receiver

Negative or positive phase angle dimming

For DIN-rail mounting

LED-indications for alarm, smart-house carrier and output

Lamp-protective soft-start function

Channel coding by BGP-COD-BAT

4 lighting scenes

Transmits the status of the dimming output

Protected against short-circuit and overload

Buttons on the front for manually controll of the dimmer

Switch for selecting scenarien lock/unlock on the front

Output are shortcircuit /overload protected



OUTPUT SPECIFICATIONS			
Outputs	2		
Dimming capacity	2 x 575 W-@ 40°C max.		
Rated operational voltage	230 VAC ±10%		
Dimming speed	3.6 s (5% - 100%)		
Response time	1 Cycle:		
•	≤ 272 ms @ 128 channels)		

7 s

Power Supply		
Rated operational voltage	230 VAC ±10%	
Power consumption	12 VA	
Power dissipation	Max. 15 W	
Frequency	50/60 Hz	

smart-house output/supply

4 kV

SUPPLY SPECIFICATIONS

**GENERAL SPECIFICATIONS** LED, Green

LED, Red – Flashing Slow flashing: Overload Fast flashing: Short circuit LED, Yellow

smart-house carrier LED, Red (one per output) Output On

**Environment** Operating temperature

Power ON delay

Indication for


Supply On Alarm


 $0^{\circ}$  to  $+50^{\circ}$ C/32° to  $+122^{\circ}$ F

## TYPE SELECTION

Ordering no. Supply 230 VAC BH6-D500W2-230

Humidity (non-condensing)	Max. 85%
Housing	H6-housing
Operating Device	Switch for selection of negative/positive phase angle control. Push button switch for turning output "ON" (one per output). Latching switch for entering scenarian programming mode.
Standards	IEC 60669, EN 55022/ EN 50081-1 and EN 55024/ EN 50082-1

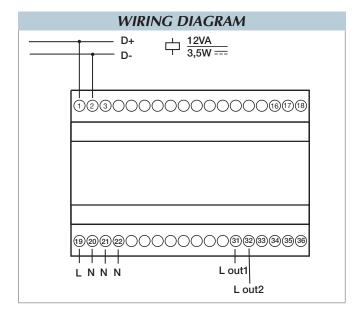

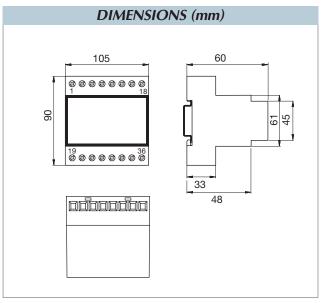

# Dimmer, 2 x 575 W Output



## **MODE OF OPERATION**

## Coding

With the BGP-COD-BAT programming unit, each switching channel can be assigned any address between A1 and P8 via the modular socket on the front of the dimmer. The allocation of the channels is as follows:

Desci	ription	Channel
	1	ON / OFF / Dimming
ER 1	2	Lighting scene 1 (3)
DIMMER	3	Lighting scene 2 (4)
Ia	4	Dimmer 1 output status
	5	ON / OFF Dimming
R 2	6	Lighting scene 1 (3)
DIMMER 2	7	Lighting scene 2 (4)
/IQ	8	Dimmer 2 output status

Functions which are not required should remain uncoded. The coding of the dimmer can be carried out without either supply voltage or smart-house signal. It is retained permanently, but may be overwritten at any time. The Dimmer output are configured in such a way at the factory that it will be switched off in the event of a fault. This configuration, too, can be changed with the BGP-COD-BAT. Setting "1" results in switching on the lighting to 100% in case of a fault, while setting "0" switches off the Dimmer output (factory setting).

## Putting into service

Commissioning may only be carried out by an authorised, trained technician. Observe the connection diagram when installing. All lines to be connected must be dead. The N-connection is absolutely necessary for the operation of the dimmer. The desired operating mode should be selected before connecting the phase, because the switches are disabled during operation as a safeguard against accidental resetting.



Turn to the left:

Positive phase angle control for inductive loads (Halo- gen lamps with conventional (threaded) transformer).

(Positive edge trigged).



Turn to the right:
Factory settings.
Negative phase angle control
(Halogen lamps with electronic
transformer), or ordinary ohmic
load.
(Negative edge trigged).

Although an incorrect setting will result in malfunction, it will not cause irreparable damage to the dimmer. The following table shows the allocation of terminals:

Terminal	Description
1	smart-house signal conductor + (D +)
2	smart-house signal conductor - (D -)
19	Line in
20/21/22	N-conductor
31	Line out - Dimming channel 1
32	Line out - Dimming channel 2

Connections between the smart-house signal and to earth potential will cause malfunctions and are not permissible. Attention should be paid to the correct polarity of the supply voltage and the smart-house signal. In order to meet the requirements for protective low voltage, VDE 0100, part 410, should be observed and applied during installation.

#### LED indicators

Front-mounted LEDs indicate the status of the device:

LED	Description	
GREEN	Supply ON	
YEL-	smart-house carrier:	
LOW	OFF: Bus fault	
"Bus OK"	ON: Bus is OK	
RED Fault	Monitoring: OFF: Status OK ON, flashing slowly: Overload ON, flashing fast: Short circuit	
RED	Dimmer 1:	
Output	OFF: Dimmer output off	
1	ON: Dimmer output on	
RED	Dimmer 2:	
Output	OFF: Dimmer output off	
2	ON: Dimmer output on	

### Channel combinations and scenes

Channel combinations (Dim. 1 / Dim. 2)		Activation		
1/5	2/6	3 / 7	Short	Long
			ON / OFF	Dimming Up/Down 5%100%
			Light scene 1 (40%)	Store light. scene 1
			Light scene 2 (80%)	Store light. scene 2
			Light scene 3 (20%)	Store light. scene 3
			Light scene 4 (60%)	Store light. scene 4
			100%	Lock /Unlock (Locked)
			0% / OFF	Set light scenes back to factory settings